

Infotainment System

QUICK START GUIDE



NS1000 AVN

QR CODE

To access the full User Manual from the internet for your vehicle's infotainment system, scan the QR code below.



CONTENTS

Button Functions	4
Safety Warnings	5
While driving	5
General safety notes	5
Warranty	5
Operation	6
Bluetooth pairing	7
Wireless phone projection	
DAB+ (Digital Radio)	
FM/AM	12
Media	13
App screen	14
Camera	15
Navigation (Optional Genuine Accessory)	17
Settings	20
Over-the-Air updates (OTA)	21

BUTTON FUNCTIONS





1	APP TRAY	Apple CarPlay/Android Auto
		Devices
		Apps
		Favourites
		Media
		Navigation
		Camera
		Accessories
		Settings
2		Favourites
		Phone screen
3		Call Answer/Decline
4		Active cameras
5		Media
6		Power/Volume knob
7	(1,5)	Activate voice control
8		Home
9		Navigation
10	• •	Mic

SAFETY WARNINGS



For safety, please follow the instructions below. Failure to do so may increase the risk of a traffic accident, which may result in death or personal injury.

WHILE DRIVING

Using a mobile phone or multimedia while driving can be distracting and increases your chance of being involved in an accident. Looking at or touching a device at the same time while driving is particularly dangerous.

- Avoid any activities that require high levels of concentration such as adjusting device settings while driving.
- For the safety of all road users, video playback is disabled while the vehicle is in motion.
- It is an offence to operate or hold a mobile phone whilst in control of a vehicle, and will incur penalties, demerit points or loss of licence.
- Listening at high volumes will impair your ability to hear surrounding events.

GENERAL SAFETY NOTES

 Operating this device for long periods with the engine off may cause the vehicle battery to become flat.

WARRANTY

- This product's specifications are subject to change without notice. Exposing this device to shock may cause damage to the screen and void the warranty.
- Always be careful when consuming liquids and other substances while in the vehicle. This may cause damage to the product and void the warrantv.
- If a fault occurs with this device, please contact your dealership. Do not attempt to repair the unit as this will void the warranty.
- The disassembly of this unit by unauthorised persons will void the warranty.
- When cleaning, turn off the unit and use a soft cleaning cloth. Avoid using alcohol or abrasive products as this may result in damage to the display and front panel and void the warranty.


Connecting your smartphone to the multimedia device can be done either by using Bluetooth or Phone Projection.

To access Bluetooth, Apple CarPlay or Android Auto, touch the **Phone** icon in the app tray on the left-hand side of the Home screen or press the physical phone button found at bottom of the unit.



BLUETOOTH PAIRING


Make sure your phone is visible to other devices and Bluetooth is turned on. Then get access to the **DEVICES** screen by touching/pressing the soft/hard phone button.

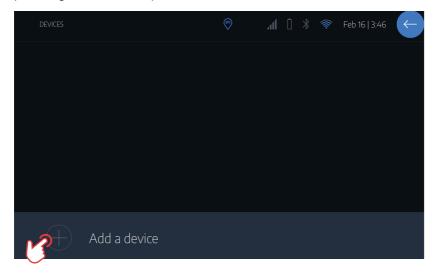

Touch the **Add a device +** icon to search for available devices. Then select your device from the list followed by the **Pair** function that appears at the bottom right-hand side of the screen. Accept the pair prompt on both the device and your smartphone and allow the necessary permissions to complete the pairing action.


NOTE:

You do not have to wait for the unit to finish scanning before selecting your device. If the search failed to find your device, turn off Bluetooth on your smartphone, wait for 10 seconds and then turn it back on again. Now tap on the **Refresh** button at the left of the device screen to rescan available devices.

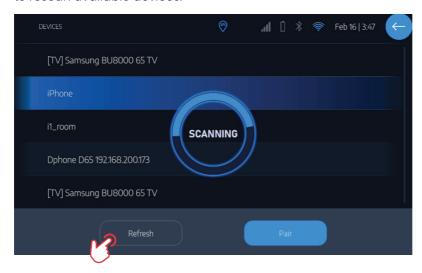

WIRELESS PHONE PROJECTION

Once the unit is connected to Bluetooth, touch the Apple CarPlay or Android Auto slider button to turn it on/off. After the feature is activated, it allows user to access their installed apps from iPhone/ Android phone on the multimedia screen.

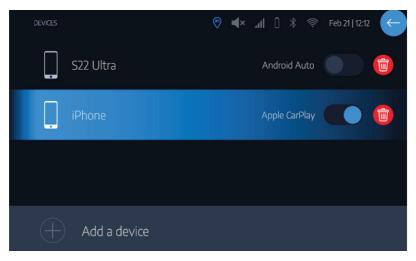




The Media menu gives access to DAB+, FM and AM radio.

DAB+ (DIGITAL RADIO)


1. Access the Radio tabs by touching the **Media** icon in the app tray or by pressing the physical button at bottom of the unit.



2. Tap on the **DAB+ Radio** tab present on the left-hand side of the screen to bring up the digital radio screen and then tap **Scan** in the list next to the DAB+ Radio tab to start station auto tune.

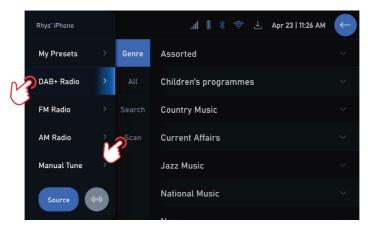

- 3. Once the scanning stops, touch listed categories to display respective stations and touch again to start playing. Scroll and touch to select any station or alternatively select any station and skip to NEXT or PREVIOUS station using the arrow keys (◄) and (►).
- 4. The unit will automatically store all the available stations on startup.
- 5. To store any station to the preset list, open the station to be saved and touch the **Save** button . The preset list for all radio types can be accessed/managed inside **My Presets** on the radio menu on the left.

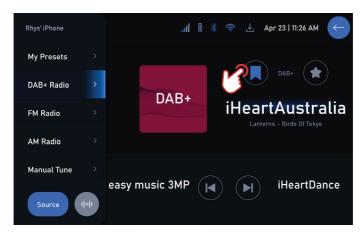




FM/AM RADIO

Access the Radio menu by touching the Media button in the app tray or by pressing the physical button at bottom of the device. Then select the FM or AM Radio tab.

FINDING AND STORING STATIONS

- Tap Scan to automatically tune and store stations. The station list 1. is accessed inside the FM/AM Radio tab.
- Scroll and tap to select any station or alternatively select any 2. station and skip to the NEXT or PREVIOUS using arrow buttons.

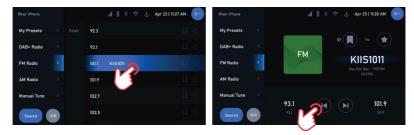


The Manual Tune tab at the bottom of radio menu allows the 3. user to manually tune any station by tapping in the station frequency numbers.




To store any station to the preset list, open the station to be saved and touch the Save button. The preset list for all radio types can be accessed/managed from My Presets list inside the radio menu on the left.

MEDIA

Switching between different multimedia options can be effortlessly done by touching the **Source** icon followed by desired media option.

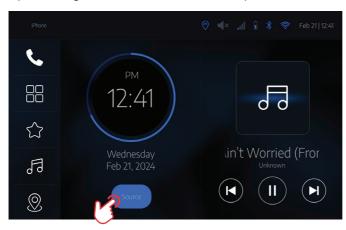


Selected media can then be controlled using on screen media controls within the media player app.

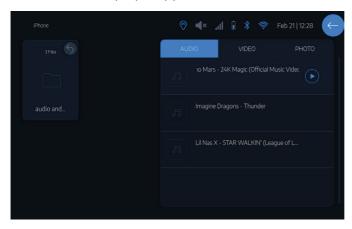


MEDIA

App screen containing pre-loaded apps can be launched by touching the four-tile icon in the home screen app tray.

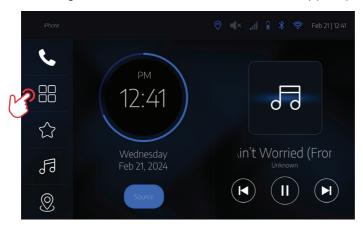


User can operate different apps preinstalled on multimedia device from the app screen.

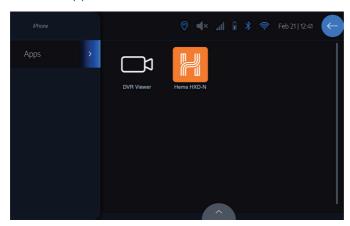

CAMERA

Connected cameras can be viewed any time by initiating camera screen by touching the camera icon from the app tray or by pressing physical button at the bottom of the unit.

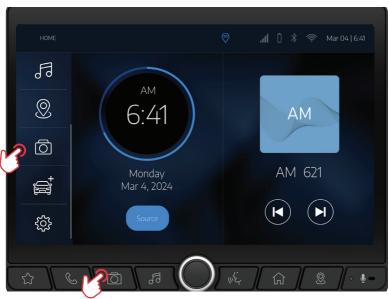



CAMERA

Inside the Camera settings menu, any connected camera can be turned on/off. Camera images can also be mirrored by activating/ deactivating mirror on/off button.

Note: Camera A is ON by default and cannot be turned off.

Up to four cameras can be connected and managed inside the device. For camera setup and activation/deactivation, go to the Camera settings menu by touching the **Settings** button (5) followed by the Camera tab.




NAVIGATION




The Navigation app can be accessed by touching the Navigation icon from the app tray or by pressing the physical navigation button at bottom of the unit.

When using navigation for the first time, the **Configuration Wizard** will initialise automatically and the user can then select the preferred language, review the license agreement, setup voice guidance, select the desired units of measurement, time formats and set route preferences.

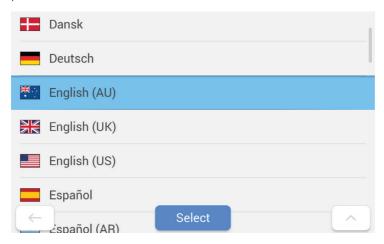


When navigation initialises and there is no active or planned route saved, the default Map screen will open to display the current time and location of the vehicle.

NAVIGATION

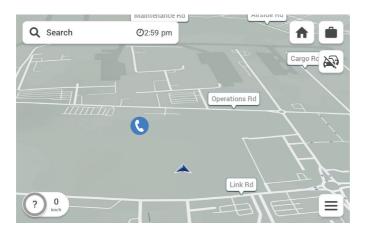


To start navigation, touch the search bar once to bring up the onscreen keyboard to set a new route. The user can search for new addresses, select from the already saved address list or choose from the quick search categories.

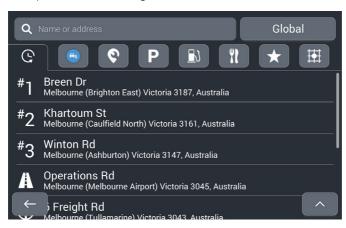

NAVIGATION

From the quick search categories user can pick from preloaded routes to Nissan dealerships, repair centers, hospitals, police stations, petrol stations, parking areas, restaurants or to a saved location around the area selected.

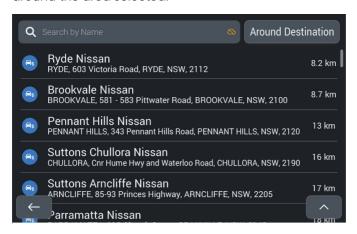


SETTINGS

Touching the **Settings** icon in the app tray will give access to the **Settings** menu.



This allows the user to control **Device**, **Audio**, **Video**, **Camera** and, **System** settings.

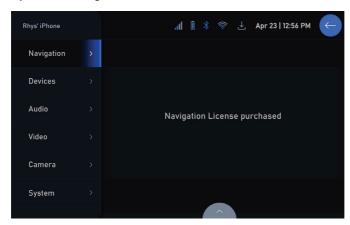

OTA UPDATE

The unit's firmware and navigation software can be updated Over-the-Air (OTA).

Note: Performing an OTA update requires access to a Wi-Fi network.

To update the unit's firmware or navigation software, connect the device to a Wi-Fi network. Go to the **Settings** app menu and touch the **System** tab. From the System tab, touch **OTA Update** to start the update process.

