

Infotainment System

USER MANUAL



NS1000 AVN

QR CODE

To access the full User Manual from the internet for your vehicle's infotainment system, scan the QR code below.



CONTENTS

Introduction	5
Warning	5
Button functions	6
Button operation	6
Volume	7
Screen functions	8
Home screen	8
Menu	9
Side menu	9
Radio	10
DAB+(Digital Aucio Broadcast)	10
DAB+ radio	11
DAB+ DLS	12
FM/AM radio	13
Connection	14
Device	14
Bluetooth	14
Disconnect and delete pairing	16
Add pairing	17
My presets	18
Keypad	19
Contacts	20
Recents	21
Messages	22
Incoming calls	23
Call waiting	24
Outgoing calls	25
Mute a call	27
Wired and Wireless Apple CarPlay and Android Auto	28
About Apple CarPlay and Android Auto	28
Things to note	28
Wired Apple CarPlay and Android Auto	28
Connect wireless Apple CarPlay and Android Auto	29
Disconnect wireless Apple CarPlay and Android Auto	30
Wi-Fi	31

CONTENTS

Camera	32
View camera	32
Playback	33
USB audio	33
USB video	35
USB image	37
Bluetooth audio	
Apps	40
Setup	41
Audio	41
Video	43
System	44
Clock	45
OTA update	46
Trouble shooting	48
User guide	
Factory reset	49
Specifications	50
Navigation Manual	53

INTRODUCTION




MARNING

Avoid any activities requiring high levels of concentration such as adjusting device settings while driving.	Always be careful when consuming liquids and other substances in the vehicle. This may cause damage to the product voiding the warranty.
For the safety of all road users, video playback is disabled while the vehicle is in motion.	When cleaning, turn off the unit and use a soft cleaning cloth. Avoid using alcohol or abrasive products as this may result in damage to the display and front panel voiding the warranty.
It is an offence to operate or hold a mobile phone whilst in control of a vehicle, and will incur penalties, loss of points or loss of license.	If a fault occurs with this device please contact your dealership. Do not attempt to repair the unit as this will void the warranty.
Listening at high volumes will impair your ability to hear surrounding events.	Disassembly of this unit by unauthorised persons will void the warranty.
Operating this device for long periods of time with the engine off may cause your battery to become flat.	This product is subject to change without notice.
Exposing this device to shock may cause damage to the screen voiding the warranty.	

BUTTON FUNCTIONS



BUTTON OPERATION

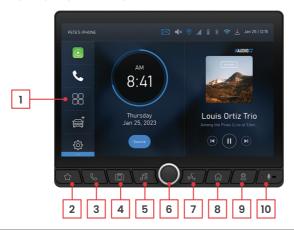

		Apple CarPlay/Android Auto
		Devices
		Apps
		Favourites
1	APP TRAY	Media
		Navigation
		Camera
		Accessories
		Settings
2		Favourites
		Phone screen
3		Call Answer/Decline
4		Active cameras
5		Media
6		Power/Volume knob
7	(1, 2)	Activate voice control
8		Home
9		Navigation
10	· • •	Mic

BUTTON FUNCTIONS

▼VOLUME

To set and adjust volume levels, simply rotate the rotary volume knob. This also brings up the volume control tile. There are three (3) independent types of volume, media, phone and navigation. The three methods by which you can adjust volume are, touch and slide adjust volume bar, one touch the desired volume bar and then rotate the volume knob or tap the '+' or '-' button next to each bar.



The volume level last set is memorised.

SCREEN FUNCTIONS



HOME SCREEN

From the **HOME SCREEN** you can view all information of operating functions. This may include:


ITEM	FUNCTION
1	Apple CarPlay / Android Auto
2	Devices
3	Apps
4	Favourites
5	Media
6	Navigation
7	Camera
8	Accessories
9	Settings
10	Unread Messages
11	GPS, Signal Strength, Battery level, Bluetooth & Wi-Fi Status
12	OTA Firmware Available
13	Current Playing Media Information
14	Source



MENU

SIDE MENU

The **SIDE MENU** on the left of the home screen allows selection of the main operating modes of the unit.

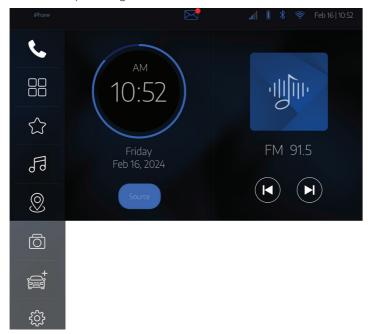

The menu consists of the following options:

SETTINGS

521102 M2110	Android Auto.
APPS	Pre-installed apps can be found here.
FAVOURITES	All saved favourites menus/options can be accessed here.
MEDIA	Media playback from Bluetooth and Radio.
NAVIGATION	Touch icon to launch Navigation.
CAMERA	All connected cameras can be viewed with one touch.
ACCESSORIES	A QR code is displayed linking to full range of accessories.

Allows user to access the settings menu.

DEVICE MENU Pair phones via Bluetooth or by using Apple Carplay

DAB+ (DIGITAL AUDIO BROADCAST)

Digital radio is a broadcast format that offers exceptionally highquality sound, useful station information and a range of exciting features to enhance your listening experience:

- Clearer sound.
- Genre-specific stations including sports, classic, modern, country and many more.
- Stations are displayed by name, not frequency, making it easier to find your favourite stations.
- DLS (Dynamic Label Segment) displays real time information from the station including album cover, artist and song information, weather and news updates and much more.

Digital radio is still subject to reception performance limitations due to environmental influences and distance from the broadcast area. You may experience signal "drop outs" in very low-lying areas such as valleys.

You may also experience "drop outs" as you begin to move away from metropolitan areas. This is not a fault with your multimedia navigation.


As the network grows, reception performance will improve. It is important to periodically scan for new DAB+ stations to enhance your digital radio experience.




Select the **MEDIA MENU** by touching the button in the **SIDE MENU**. Then touch the **DAB+ Radip** tab.

FINDING AND STORING STATIONS


1. Scan DAB+ stations by touching DAB+ Radio > and Scan

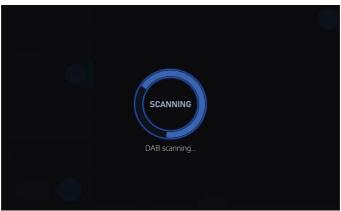

2. Once the scanning stops, touch listed categories to display respective stations and touch again to start playing. The unit will automatically store all the available stations on startup.

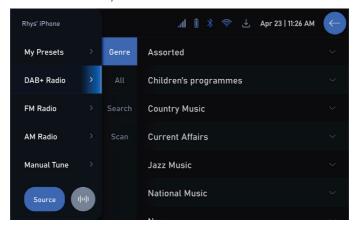


3. While playing any station, touch or to tune to the next station.

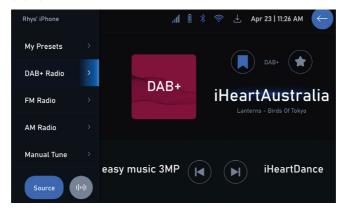

4. To store any saved station to the preset list, open the station to be saved and touch . The preset list for all radio types can be accessed/managed inside 'My Presets' list inside the radio menu on the left.

dab+ DAB+ DLS

The **DLS** (Dynamic Label Segment) displays the station and song information including the album cover.

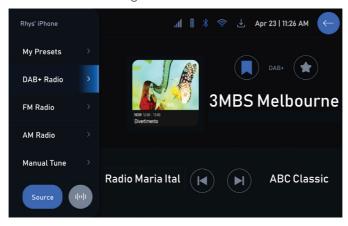




FM/AM RADIO

Select the RADIO MENU by touching the button in the side menu and then FM or AM the Radio tabs.

FINDING AND STORING STATIONS

- 1. Touch Scan to automatically tune and store FM stations. The station list can be accessed inside the FM Radio tab.
- 2. Scroll and touch to select any station or alternatively select any station and skip to next or previous station using and buttons.

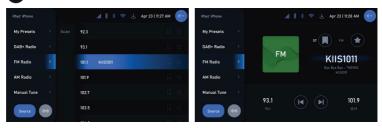

3. Manual Tune tab at the bottom of radio menu allows the user to manually tune any station by punching in the station frequency numbers.



4. To automatically search for the next station, touch and hold or . The tuner will search and then stop at the next

available station.


DEVICE

Up to four (4) devices can be paired to the infotainment system. Only one (1) device is connected at a time.

BLUETOOTH PAIRING

To connect your Phone:

1. Either touch the icon on the home screen or press the physical button of the unit to go to the **DEVICES** screen.

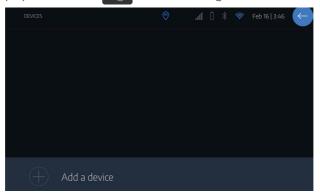


- 2. Make sure your phone is visible to other devices and Bluetooth is turned on.
- 3. Touch the button to search for available devices. You do not have to wait for the unit to finish scanning before selecting your device.
- 4. Select your device from the list.


Note: If the search failed to find your device touch the **Refresh** button to rescan available devices



5. After selecting your device, the **PAIR** button will illuminate. Touch the **PAIR** button to start pairing your device.

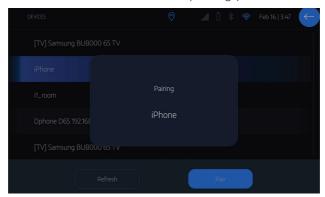


6. Touch the **Pair** button on the unit and then on your device. Press **Allow** on your device if you would like your contacts and messages to be accessible via the head unit.

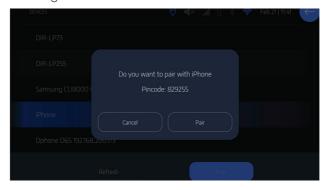

7. Your device is connected to the unit and the device's name is displayed on top left corner of the screen. Your device will now be connected and available to make and receive calls, view messages, check recent calls and see the contacts list. Bluetooth audio can also be played from the connected device.

DISCONNECT AND DELETE PAIRING


1. To delete phones paired but not connected, simply touch the delete button .

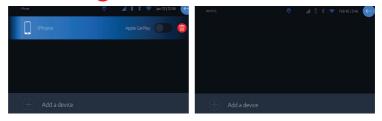

2. For any connected phones first disconnect by touching the already highlighted phone. Then touch the delete button to delete the phone from the device list.

ADD PAIRING

1. If there is a phone currently connected to the unit, it must be disconnected before adding another device.

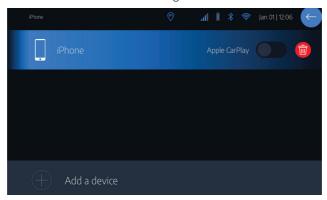

2. Follow Step 2 to 7 of the **Bluetooth Pairing** to add another device.







MY PRESETS

Once your phone is connected via Bluetooth, up to 24 contacts can be saved in **My Presets**.


1. Open the contact that needs to be saved from the Contacts list then touch the symbol located at right of each contact.

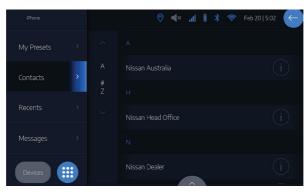

2. Then touch the Save button found on the contact card to add the selected contact to the My Presets list.

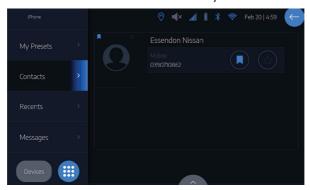


3. Return to **My Presets**. Your saved contacts can be now viewed here. Touch the required contact to make a call.

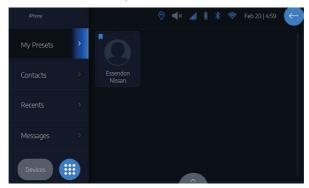

4. To remove a contact from My Presets, repeat steps 1 and 2.

KEYPAD

1. From the phone menu touch the iii button at the bottom of screen to open the phone keypad.

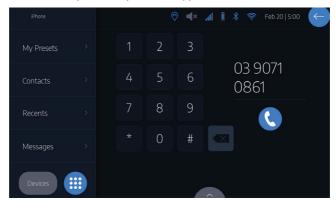


2. Enter the phone number on the keypad, and touch 🕻 to call.



Select CONTACTS from the phone menu to view your contact list.


1. To search for a contact, touch the screen and slide the list up and down to locate your required contact.

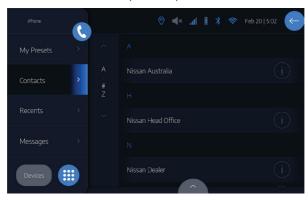

2. Alternatively, touch once on the alphabet symbol on the left-hand side of the contact list and then touch any letter to filter by the first letter of contact names.




3. Touch the screen and slide the list down to locate your required contact.

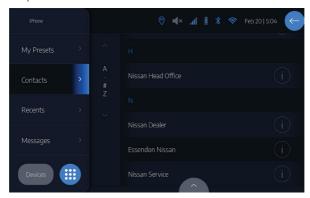


RECENTS

 Select RECENTS from the phone menu to view all recent received and dialled numbers or contact names if saved in your contact list.

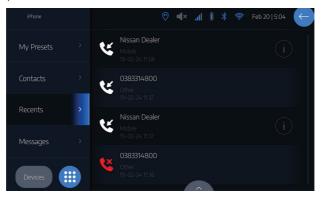

2. To re-dial a recent call, touch the corresponding listed number or contact name.



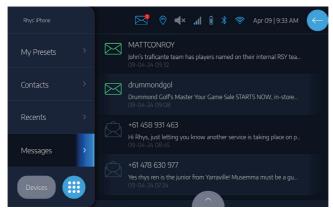

- Select Messages from the phone menu to view all recent messages. The date and time for each message are also displayed.
 - Read messages are depicted by an 🔯 icon.
 - Unread messages are depicted by an \boxtimes icon.
 - New message notification is also displayed in the top information bar with unread messages depicted by the icon.
- 2. Touch the relevant message to view the entire message.
- **PLEASE NOTE:**

For iOS Users please enable 'Show Notifications' in the Bluetooth menu on your device to enable viewing of text messages on the screen.



INCOMING CALLS



- Incoming call information is displayed on any screen. Calls can be answered or rejected by touching the corresponding button.
- 2. Touch the symbol to minimise the call screen to a small tab size at the top. To bring the call screen back to full screen mode touch .



CALL WAITING




PLEASE NOTE:

Call waiting function needs to be activated in your mobile phone settings. Whilst on a current call, there is another incoming call.



- 1. Touch Answer + End to answer second call and end the first call.
- 2. Touch Reject Call to reject the second call.
- 3. Touch Answer + Hold to answer second call and place the first call on hold.

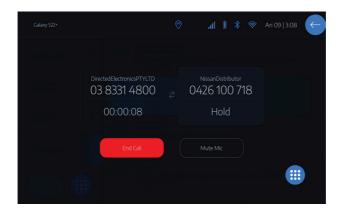


- 4. Toggle between first and second call by touching either box.
- 5. Touch the End Call button to end the call that is currently active.
- 6. When an active call has been ended, the call that was on hold will resume.






OUTGOING CALLS


- 1. Touch the button on the front panel to open My Presets within the phone menu. Touch any preset contact to make a call or alternatively select any contact from the listings.
 - · My Presets
 - Contacts
 - Recents

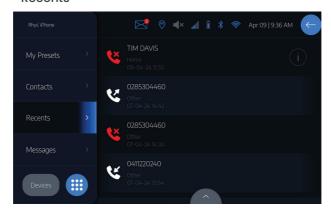

- 2. A call can be made by pressing the phone number or contact in the listings.
- 3. Touch iii to manually dial an unsaved number.

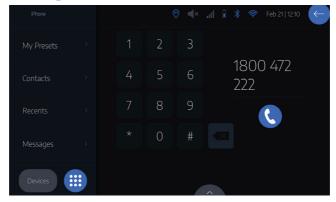

4. Touch (to start dialling.

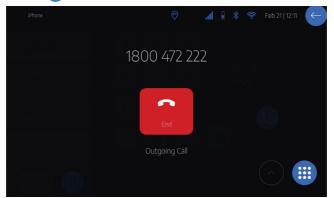

MUTE A CALL

1. Once connected, the call duration is displayed. To mute a call, touch the **Mute** button.



2. Touch **iii** to return to the keypad when numeric input is required for menu selections.



ABOUT WIRED & WIRELESS APPLE CARPLAY OR ANDROID AUTO

Wired and wireless Apple CarPlay or Android Auto projects some of the useful apps on your compatible Apple or Android phone onto the unit's display screen. You will then be able to control calls, messages and music and navigate with maps on the unit's display screen..

THINGS TO NOTE

- For a wired connection with your phone, it is recommended to use the supplied cable charger.
- Your Apple/Android phone may require you to download, update and allow certain apps upon plugging in the USB cable charger or connecting wireless to the unit for the first time.
- Wireless connection to unit is only established with wireless compatible phones.
- Wireless connection is disabled if unit is connected to a Wi-Fi network or hotspot.



WIRED APPLE CARPLAY OR ANDROID AUTO

 Plug the USB cable charger into the USB port. You may have to allow connection on both the phone and unit to launch wired Apple CarPlay Or Android Auto for the first time.






WIRED AND WIRELESS APPLE CARPLAY OR ANDROID AUTO



CONNECT WIRELESS APPLE CARPLAY OR ANDROID AUTO

• Once the unit is connected to Bluetooth, touch the 'Apple CarPlay or Android Auto' button to turn it on. Selection is indicated by a blue colour.

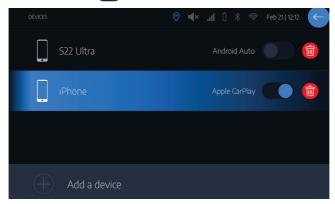

 Once wireless connection is successful, approved vehicle use apps on the Apple/Android phone will be displayed. To scroll through the apps, swipe left or right for an Apple phone and up or down for an Android phone.





WIRED AND WIRELESS APPLE CARPLAY OR ANDROID AUTO



DISCONNECT WIRELESS APPLE CARPLAY OR ANDROID AUTO


 Touch next to 'Apple CarPlay or Android Auto' to disconnect the wireless connection between your phone and the unit.
 Once wireless is disconnected unit is switched to Bluetooth connection.





RETURN TO UNIT'S HOME SCREEN

Touch HOME to return the home screen of the unit.
 Use HOME to toggle between the Apple CarPlay or Android Auto screen and home screen of the unit.

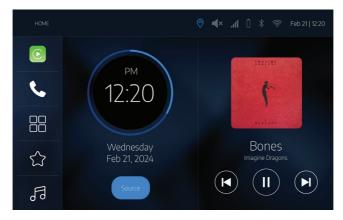

WI-FI



To connect to a Wi-Fi network or hotspot on your phone.

1. Touch the Wi-Fi symbol to open the Wi-Fi setting menu which is automatically switched to On. The system will automatically search for available networks.



2. Select the required network/hotspot and enter the password.



3. The connected network will be displayed with a blue higlight.



CAMERA



VIEW CAMERA

To view the Camera, push the button (refer to Page 6) on the front panel or alternatively touch the soft touch button found on the slide menu (refer to page 9).



Only genuine Nissan cameras can be installed to this device. Installing non-genuine accessories to this device may cause serious damage and void the manufacturer's warranty.




USB AUDIO

USB-A port located below the HVAC controls and to the left of 12V socket is media compatible.

Note: USB-C port located above USB-A port is for charging only and is not media compatible.



- 1. Connect a USB memory stick containing media files
- 2. To access an audio file, touch the Home screen and choose Source button on the Home screen and Choose Sourc
- 3. To view the available audio files, touch the USB tab displayed on the infotainment syste and then select the AUDIO tab.
- 4. Select the required file or folder containing file(s) to play.

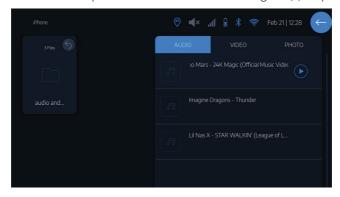

Touch the (1) button to cycle between repeat album,
 repeat folder, and (1) repeat a song.
 Touch the 20 button to shuffle your playlist.



- 6. When playing back files, you can select which file type you wish to play. This is particularly helpful when there are different file types stored on the **USB** drive.
 - a. To select Audio, touch the Audio tab.
 - b. To select Video, touch the Video tab.
 - c. To view Image files, touch the Photo tab.
- NOTE:

The playback preference is for audio files. Videos and pictures must be manually selected and played from the respective tabs.




USB VIDEO




NOTE:

There is no video playback if the vehicle is not GPS stationary or no GPS signal. A cautionary message will be displayed on the screen as shown below:

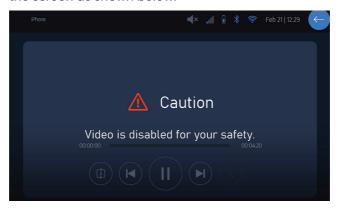


- To View a video file, touch the Video tab to display video files inside the selected folder.
- 2. Select the required file to open video player.

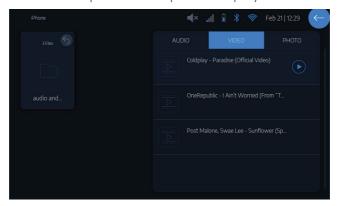

- 3. Your selected video file will start playing with the video control panel visible at the bottom of the screen.
- 4. Touch the screen to remove the control panel.

- 5. Touch the screen again to display the control panel to Replay Movie, Rewind, Pause, Play or Forward the video.
- 6. To return to the files screen, touch the back button.

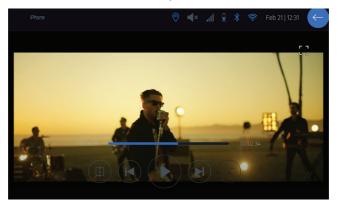


7. Touch the (1) button to cycle between repeat album, (1) repeat folder, and (1) repeat a song.

Touch the (2) button to shuffle your playlist.



USB IMAGE

- 1. To view an image file, touch the PHOTO tab at the top to view pictures saved inside the selected folder.
- 2. Select the required file found on the left side of the screen to open Image.

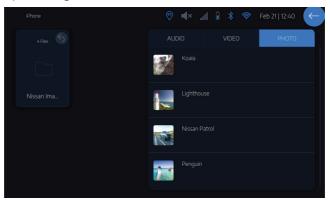


Your selected image file will be displayed with the image control panel visible at the bottom of the screen.

3. Touch the screen to remove the control panel.



4. Touch the screen again to display the control panel to Seek Previous or Seek Forward from one image to another.

5. To return to the files screen touch the List button.

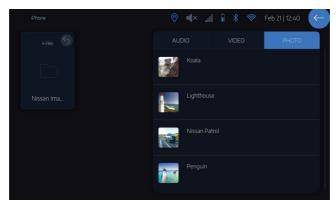




BLUETOOTH AUDIO

BT Music allows you to wirelessly play audio from your phone via A2DP Bluetooth Streaming.

- 1. Connect your phone to the unit via BLUETOOTH.
- 2. Touch the **Source** button from the home screen or from the media menu and then select BLUETOOTH to go to BT music.




3. Select the desired music files or streaming media on your phone.

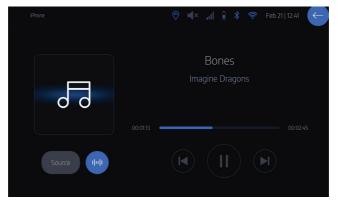


(+) APPS

- 1. From the side bar menu of the home screen, touch the Apps icon to go to the Apps screen.
- 2. Touch the required App to open.

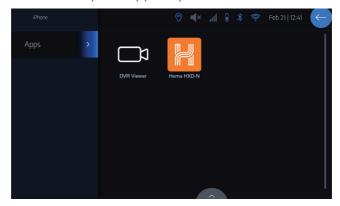



1. Touch the **SETTINGS** button found in the bottom left corner of any screen to open the SETUP MENU.

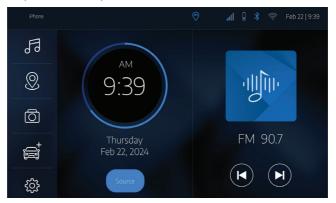

- Touch the Audio button to setup Balance, Fader and EQ levels.
- 3. To adjust the speaker balance and fader, touch the blue dot on the centre of the displayed grid, then slide to the required position Front, Rear, Left or Right. Alternatively, touching any point on the grid will move the position instantly. Another option is to use the arrow buttons located on all four sides of the grid. Default equalizer setting is **Custom**. Adjust the frequencies bar levels to suit.



4. There are five (5) pre-set equalizer settings, Rock, Pop, Electronic, Classical and Podcast. Select the preset settings to best suit the audio types that you are listening to.



5. Touch the **Custom** button to manually adjust equalizer levels to best suit your audio experience.



6. Touch the relevant frequency band and then touch on the orange level indicator. Then slide up and down till the desired level is reached. Alternatively touch the up or down arrow to increase one dB at a time.

VIDEO

 Touch the SETTINGS button found at the bottom of the side menu on home screen.



2. Touch Video on the side bar list to open the Video Settings screen.




From here you can adjust Brightness, Contrast and Saturation of the video playback by touching the corresponding plus/minus buttons or by adjusting the slider with your finger across the screen.



1. Touch the SETTINGS button at the bottom left corner of any screen to open the SETUP MENU and scroll down to System.



- Set the time, date, month and year.
- Edit Wi-Fi settings.
- Turn screen audible tones Off or On.
- Choose between different display modes and adjust brightness.
- Set illumination colour. Red is the default colour. Other colours available are red, orange, blue and white.

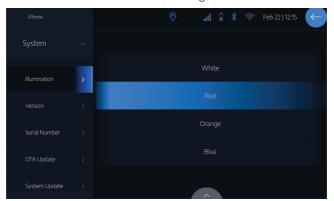

- View firmware version information.
- · View unit serial number.
- · Check for latest OTA firmware.
- Perform a factory reset.




The time is automatically set to your time zone when the unit is installed. **GPS AUTO TIME** turned On is the default setting.

 Touch the SETTINGS button found at the bottom of the side menu on home screen and select System followed by Time & Date.



To set the clock and date manually, slide the Set Time & Date by GPS to Off, then touch the arrows to adjust.

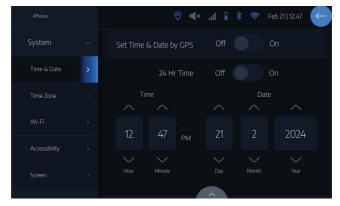

- Adjust the Hour, Minute, Month, Day, Year by using the up and down arrows
- b. Toggle between 12 and 24-clock format by touching the **Off/On** switch.
- c. Turn on Set Time & Date by GPS, the time will automatically change with the time zone.



OTA UPDATE

The unit's firmware and navigation software can be updated Over-the-Air (OTA). To perform OTA updates, the unit must be connected to a Wi-Fi network or mobile hotspot. (Refer page 32)

- Touch the SETTINGS button found at the bottom of the side menu on home screen.
- 2. Scroll down and then touch the System button.
- Touch the OTA UPDATE button.

The unit will check and display required updates and the top information bar will display a download tray to indicate there is an update available.

4. Select download to initialise the update process.



The unit will download the update. Download time will vary depending on the network connection.

Note: Following an update a Factory Reset must be performed.



Once downloaded, the unit will automatically unzip and install the update.

The unit will reboot to normal operation with the latest update.




DO NOT TURN THE UNIT OFF during the update process.

TROUBLESHOOTING

USER GUIDE

1. Touch the **Settings** button found at the bottom of the side menu on home screen followed by System.

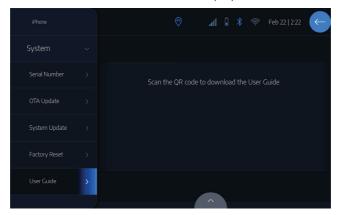

2. Touch the **User Guide** button. A QR code will be displayed. Scan the QR code with any Barcode /QR code reader app on your mobile phone. Click on the displayed URL to download the User Manual onto your mobile phone.



TROUBLESHOOTING

FACTORY RESET

This operation will reset the unit to factory settings.

- 1. Touch the SETTINGS button found at the bottom of the side menu on the home screen.
- 2. Scroll down then touch System
- 3. Touch Factory Reset
- 4. Touch the Reset button.



5. The unit will erase all settings and then reboot before opening to the home screen.

SPECIFICATIONS

	Radio Modes	AM/FM/DAB+/RDS
RADIO	AM Frequency Range	522 – 1710 kHz
	FM Frequency Range	87.5 – 108 MHz
	DAB+ Frequency Range	9A 202.928 MHz, 9B 204.640MHz, 9C 206.352 MHz
	Station Memory	AM/FM/DAB+ 12 Pre-Sets
	Tune	Yes
	Seek	Yes
	Scan	Yes
	Power Output	4 X 45W
	Balance Control	Yes
	Fader Control	Yes
AUDIO	Bass Control	Yes
	Treble Control	Yes
	EQ Control	Yes
	Mute Control	Yes
	Audio Format	AAC/AMR/MP3/WAV/WMA
MEDIA	Video Format	1080p AVI/FLV/MKV/MP4
	Image Format	BMP/GIF/JPEG/PNG
	Screen Size	10.1"
	Screen	TFT 1920 X 1200, Capacitive Touch Panel
	Power Button	On/Off/Volume Up/Volume Down/Mute
	Front Buttons	x7
	USB Ports	1x Rear
	USB-C Port	1x Rear
HARDWARE	Bluetooth	BT 4.2 A2DP
	Wi-Fi	802.11 b/g/n
	Microphone	Internal
	Tuners	Digital AM/FM/DAB+
	Camera Inputs	x 1 Input - Reverse
	Fuse	15A MINI BLADE
	,	

NOTES

NOTES



Infotainment System

NAVIGATION MANUAL



NS1000 AVN



CONTENTS

Intr	oduc	tion		57
	Warr	nings ar	nd safety information	57
	Free	map up	odates	57
1.0	Getti	ing staı	rted	58
1.1	Initio	ıl set-u	p	58
2.0	Navigation operation			61
2.1	Мар	screen	s	61
	2.1.1	Street	signs	62
	2.1.2	Tunne	l view	65
	2.1.3	Trip co	mputer	65
2.2	Мар	symbo	ls	66
2.3	Alert	symbo	ols	67
2.4	Man	oeuvre	symbols	68
2.5	Navi	gation	menu	69
2.6	Men	u butto	ns	70
3.0	Using	g navig	ation	71
3.1	Dest	ination	options	71
	3.1.1	Select	ing a point on the map	72
	3.1.2	Using	combined search	73
	3.1.3	Enterin	ng an address in another state	75
	3.1.4	Enterin	ng address or crossroad in the same state	76
	3.1.5	Enterin	ng address with street name only	78
	3.1.6	Select	ing a place of interest	79
		3.1.6.1	Using quick search categories	79
		3.1.6.2	Searching by category	81
		3.1.6.3	Selecting a saved location	84
		3.1.6.4	Selecting a destination from history	85
		3.1.6.5	Selecting coordinates	87
	3.1.7	Select	ing a multipoint route	91

3.2	Rout	e prefe	rences, itinerary and alternatives	92
	3.2.1	Alterno	ative routes	93
		3.2.1.1	Route preferences	93
		3.2.1.2	Itinerary	94
3.3	Chec	king tr	affic events	94
	3.3.1	Traffic	summary with no active route	95
	3.3.2	Traffic	summary with active route	96
	3.3.3	Traffic	map current and historic	98
3.4	Editir	ng a ro	ute	99
	3.4.1	Adding	g an additional destination	100
	3.4.2	Saving	g a location	100
	3.4.3	Editing	g a location	102
	3.4.4	GPS in	formation	103
4.0	Updo	ates		104
4.1	Setti	ngs		105
	4.1.1	_	preferences	
		4.1.1.1	Route planning method/navigation mode	105
		4.1.1.2	Road types	106
	4.1.2	Sound	l	106
	4.1.3	Warnir	ngs	107
	4.1.4	Navigo	ation view	108
	4.1.5	Region	nal	110
	4.1.6	Start c	configuration wizard	110
5.0	Abou	ıt		110
6.0	Troul	blesho	oting	111
6.1	GPS 9	signal d	cannot be received	111
6.2		_	nnot be found	
6.3	The c	calcula	ted route is not optimal	111
6.4	The s	speed l	imit warning is not accurate	112
	Keyboard buttons are greyed out112			
			en behind junction image	
			······································	
Not	es			114

INTRODUCTION

WARNINGS AND SAFETY INFORMATION

This navigation system is designed to provide driving information and directions to destinations using the built-in GPS receiver and navigation software.

Looking at the display while driving should only be done when safe to do so. It is recommended that the driver of the vehicle plans and reviews the route before departure. If a change or addition to the route is required, it is advised that the vehicle be stopped prior to making any amendments to the route.

Drivers must adhere to state and national laws regarding the use of the navigation system while driving.

Failure to adhere to laws may result in fines or loss of licence.

Navigation information such as roads, speed limits, signs and restrictions may have changed since the map data was produced and compiled in the navigation software. Therefore, users are obliged to always obey the restrictions displayed on the road when driving.

Speed limits may not be available for all roads. It is advised to enter the maximum permitted speed in the area for the vehicle.

FREE MAP UPDATES

To ensure that you have access to the latest maps and navigation software, there will be quarterly Over The Air (OTA) updates available for three years on commencement of the navigation licence.

1.0 GETTING STARTED

Operation of navigation functions is achieved by simply **touching** the navigation screen.

1.1 INITIAL SET-UP


When using navigation for the first time, the **Set-up Wizard** will initialise automatically.

1. Select the preferred language and then **touch** the button to save the selection.

Regional settings can be changed at any time from the menu. (See 4.1.5)



2. Read the licence agreement, and then **touch** the button to agree with the terms of use.

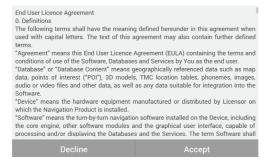

NOTE: If the licence agreement is not accepted, then the navigation system cannot be used.

3. Select the language and voice (Natural or TTS) for guidance messages. Touch Next to continue.



TTS technology enables machine-generated vocal instructions.

The advantage of **TTS** is that it can announce street names, traffic events, route summary, and traffic rules.


The language used can be changed at any time from the menu. (See 4.1.5)

4. Select the desired units of measurement and time formats. **Touch**Next to continue.



Format settings can be changed at any time from the menu. (See 4.1.5)

5. Edit route preferences including toll roads, ferries and unsealed roads. **Touch** Next to continue.

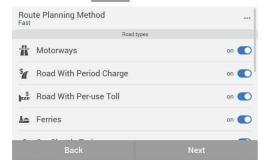

Route preferences can be changed at any time from the menu. (See 4.1.1)

6. **Touch** the **Finish** button to complete the wizard setup and start using the navigation.



2.0 NAVIGATION OPERATION

When navigation initialises and there is no active or planned route saved, the default **Map** screen will open to display the current time and location of the vehicle.

2.1 MAP SCREENS

Live traffic information can be accessed by **touching** the 🔊 button.



At the bottom of the screen, **touch** the **b**utton to access the **Main Menu**.



When navigating on a current trip, the name of the next road is displayed at the top of the screen and an arrow below indicating the direction of the next manoeuvre. Distance to the next manoeuvre is displayed at the top left corner.

A **traffic condition** icon will appear if there are incidents along the route.

The **highlighted orange roads** indicate the planned route. To accompany this route, an estimated time of travel, distance and arrival time are also given at the top right-hand side of the screen.



The vertical orange bar at the left-hand side of the screen gives a visual indication of the distance remaining, relative to your current position and the destination, at the time of starting your route. Attached to this bar is also an indication of your current speed, which can be seen in the above image.

2.1.1 STREET SIGNS

Overhead signs will appear as the vehicle approaches an intersection. If a planned route is active, the relevant sign will be highlighted, and a white arrow will indicate the direction of travel required.

The current travelled road is displayed at the bottom centre of the screen.



If two manoeuvres are required close to each other, a second direction arrow will appear to the right of the first arrow.



Speed limit audio warnings will also be generated when the navigation detects a vehicle speed that exceeds the speed limit of that road.



Lane information is displayed at the bottom of the screen.

An icon with the next manoeuvre and distance is displayed at the top left corner.

In built-up areas with large structures, the map will automatically zoom to a 3D view to show buildings and bridges. This is a default feature of navigation. The map will then zoom back out to a 2D screen.



The 3D mode can be turned on and off by **touching** the 3D or 2D buttons.

If the above buttons are not visible on the screen, **touch** the button to open the **Main Menu** screen and then **touch** the **3D** or **2D** buttons at the bottom of the screen.

2.1.2 TUNNEL VIEW

As the vehicle enters a tunnel, the screen changes to a visual representation of a tunnel.


At the right hand side of the screen there is a small display that shows the vehicle's progress through the tunnel and the distance remaining 11 lm.



Lane information is displayed at the bottom of the screen. To return to the Map screen, simply touch the screen.

2.1.3 TRIP COMPUTER

Touch the information 3 12:12 am to open the Trip Computer settings where 'Time of Arrival at Destination', 'Time to Destination' and 'Distance to Destination' can be rearranged.

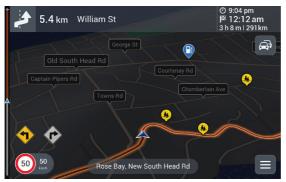

2.2 MAP SYMBOLS

Table 1: Map Symbols

SYMBOL	DESCRIPTION
	Displays the current GPS location of the vehicle
	Approaching the waypoint destination of the current route
B	Approaching the destination of the current route
#	The current route includes expressways
T	Details of petrol stations and restaurants available (touch to view)
\$4	This route Includes includes tollways
	This route includes ferries
[3D] 2D	Switch between a 2D and 3D interpretation of the map.
(0) (0)	Zoom in or out to view the map and its surrounds
56	Rotates the map to the left or right
	Indicates north

2.3 ALERT SYMBOLS

Table 2: Alert Symbols

SYMBOL	FUNCTION
~	Indicates traffic events along a route are not available
	Indicates that there are no traffic events affecting the current route
	Indicates roadworks with no information available
	Indicates roadworks with information available
** 0:16	Indicates traffic congestion including the expected delay time
	Indicates no traffic congestion or the delay is not known
50 80 km/h	Displays speeding alert whether the current road is B-Double rated
100 L lukm/h 600 m	Displays speed camera alerts with speed limit and distance to speed camera

2.4 MANOEUVRE SYMBOLS


Table 3: Manoeuvre Symbols

SYMBOL	FUNCTION
1	Continue straight
77	Veer left or right
44	Turn left or right
4.2	Keep left or right
MM	Turn sharp right
P	Turn back
(3)	Enter roundabout and take exit number
7 11	Continue along highlighted lanes

2.5 NAVIGATION MENU

To access the Main Menu, touch the button at the bottom right corner of the Map screen.

From the menu list, add a new destination, create a multipoint route, check map updates or access settings.

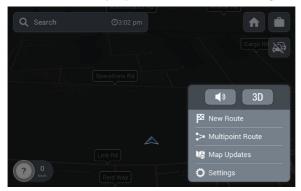

Touch anywhere on the screen to return to the **Map** screen.

When a route has commenced, more options become available to add waypoints, view a route summary, or delete the route.



If a waypoint has been added to the route, the button is replaced with the button.

At the bottom of the Main Menu screen:

- volume can be adjusted
- 3D map perspective can be changed.

2.6 MENU BUTTONS

Table 4: Menu buttons

BUTTON	FUNCTION
B New Route	Select the destination by entering an address or co-ordinates or by selecting a place, a saved location, or a saved route. Recent destinations can also be viewed from history.
① Route Summary	View the route in full on the map and check route parameters and alternatives.
*> Multipoint Route	Build a route from one or more route points. Routes can also be independently planned from the current GPS location by setting a new starting point
Map Updates	Access latest map updates.
Settings	Customise navigation preferences and operational functions.

Table 5: Additional Active Route Buttons

BUTTON	FUNCTION
Add Waypoint	Add another destination to the current route.
Delete Route	Delete current route.
∑ Delete Waypoint	Delete the next waypoint.

Table 6: Additional Buttons

BUTTON	FUNCTION
*	Opens the saved locations screen, where locations can be edited or added as a favourite destination.
◄))	Set the volume level or mute the navigation.
3D 2D	Switch the viewing dimension of the map screen and objects.
^ ~	Open or close a list of additional features like saving a location or searching for places around the cursor.
←	Go back to the previous screen.

3.0 USING NAVIGATION

By default, the navigation calculates routes using the road network with **vehicle specific** maps provided with this product.

3.1 DESTINATION OPTIONS


A destination can be selected by any of the following options:

- Selecting a point on the map screen (see 3.1.1)
- Using a combined search (see 3.1.2)
- Entering an address (see 3.1.3)
- Selecting a place of interest (see 3.1.6)
- Selecting a previously saved location (see 3.1.6.3).
- Selecting a location from historical destinations (see 3.1.6.4)
- Entering co-ordinates of the destination (see 3.1.6.5)
- Selecting a multipoint route (see 3.1.7).


3.1.1 SELECTING A POINT ON THE MAP

The fastest way to enter a destination is to simply **touch** a point on the **Map** screen.


 Touch and slide across the screen to move the map to the desired area.

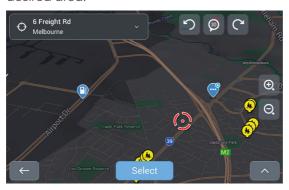

- 2. Use your thumb and finger to zoom in the location if required or use the or buttons.
- 3. **Touch** the screen in the area required to set the destination point. The location of the marker is displayed at the top of the screen.
- 4. **Touch** the button to view further information and options around the marker.
- 5. **Touch** anywhere on the screen to return to the **Map** screen.
- 6. **Touch** the **Select** button to save as destination and continue to the **Route Summary** screen.

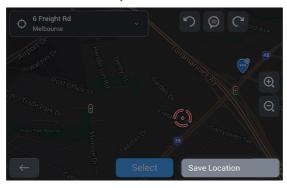

7. **Touch** the Start button to commence the route.

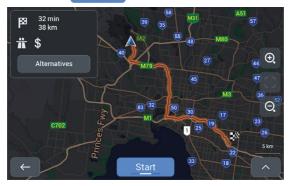

3.1.2 USING COMBINED SEARCH

The fastest way to search for a destination is to use **combined search**.

From the Map screen, touch Q search or alternatively touch to open the Main Menu screen, then the New Route button to open the New Route screen.




- 1. From the **New Route** screen, touch Q Name or address to open the **Search** screen.
- 2. Start entering the name or address required. Only a partial name is required.
- 3. If a new search area is required in a different state, enter the country/state and the town.


4. A filtered list will display under the field with combinations of the input text.



- 5. **Touch** the button to hide the keyboard and reveal the list.
- 6. **Touch** anywhere on the screen and slide up and down the list to locate the correct location.

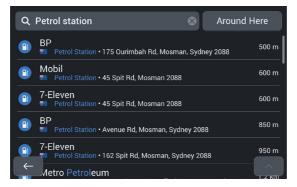

7. **Touch** the required list item to select it.

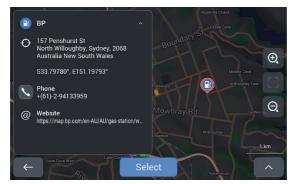

- 8. At the right hand side of the screen, there are options to avoid expressways, tollways and ferries.
- 9. **Touch** the **Select** button to save as the destination and advance to the Map screen.

3.1.3 ENTERING AN ADDRESS IN ANOTHER STATE

From the Map screen, touch the button to open the Main Menu screen, then the New Route button to open the New Route screen.

1. **Touch Q** Name or address to start searching. Type the address or pick one from the category list.




By default, the navigation saves the country and state of the current location, or where the last known location of the vehicle was, in case there is no valid **GPS** position.

2. If the new address to be entered is in another state, **touch** the top right **Global** field to display the tile and then choose **In** a **Country or City**, then enter the new state, or **touch** the button to hide the keyboard to view a list of states.



3. Slide up and down anywhere on the screen to scroll up or down the list, to locate the required state..

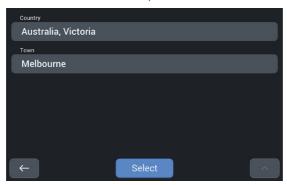

4. **Touch** the required state to save and move to the next fields.

3.1.4 ENTERING ADDRESS OR CROSSROAD IN THE SAME STATE


1. Start entering the name of the town/suburb required. Only a partial name is required, when entering the text. A filtered list will display under the field with combinations of the input text.



2. **Touch** the button to hide the keyboard and reveal the list.



- 3. **Touch** the required town/suburb to save and move to the next field.
- 4. Now, type the address/name in the Q Name or address field

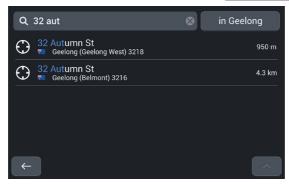

- 5. Slide up and down anywhere on the screen, to **touch** the result under the search field to save and continue.
- 6. Once all fields have been completed, the input destination will be pinned to the map.



- 7. At the right-hand side of the screen, there are options to avoid freeways, tollways and ferries.
- 8. **Touch** the **Select** button to save as destination and advance to the map screen.

3.1.5 ENTERING ADDRESS WITH STREET NAME ONLY


From the Map screen, touch the button to open the Main Menu screen, then the New Route button to open the New Route screen.

1. Touch Q Name or address to start searching. Type the street address.



If the required street is in a state other than the one displayed in the country field, please follow the steps to enter the correct state (see 3.1.3).

2. Use the keypad to enter the address number required.

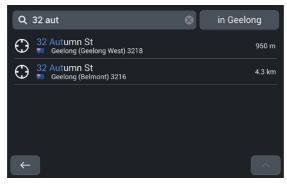


 Touch the result under the search field to save and continue.
 If no street number is entered, the saved search will navigate to the midpoint of the street.

3.1.6 SELECTING A PLACE OF INTEREST

Places of interest can be selected as the destination or a waypoint within a trip. **See 3.4.2** for adding as a waypoint.

From the Map screen, touch the button to open the Main Menu screen, then the New Route button to open the New Route screen.

Touch and choose from various categories listed as tabs.

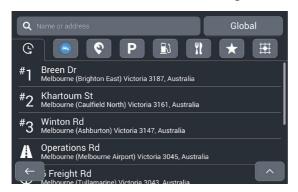

3.1.6.1 USING QUICK SEARCH CATEGORIES

From the **New Route** screen a list of quick search categories can be viewed including Nissan dealerships.

- (C) History of previously used addresses are displayed.
- Nissan dealerships are displayed.
- Emergency services are displayed.
- P Parking around the destination is displayed.
- Petrol stations around the destination is displayed.
- Restaurants around the destination is displayed.
- ★ Saved locations can be accessed here.
- ₩ Specific locations can be searched using coordinates here.

- 1. Scroll up or down the list to locate the required category.
- 2. **Touch** the required category to open the **List of Places** screen.



- 3. **Scroll** up or down the list to locate the required place. At the right of the places listed, the distance in kilometres from the current location is displayed.
- 4. **Touch** the required place to save and move to the next field.




- 5. Once all fields have been completed the input destination will be pinned to the map.
- 6. On the right-hand side of the screen there are options to avoid freeways, tollways and ferries.
- 7. **Touch** the Select button to save as destination and continue.

3.1.6.2 SEARCHING BY CATEGORY


From the Map screen, touch the button to open the Main Menu screen, then the New Route button to open the New Route screen.



- 1. Touch the button on the New Route To screen to open the Nissan Dealerships screen.
- 2. Tap in the Q Search by Name box to filter displayed list by name.

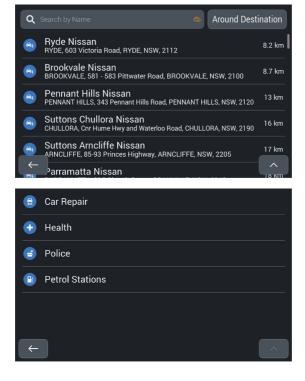

3. **Touch** the Around Here button to select the area to search for the required place.

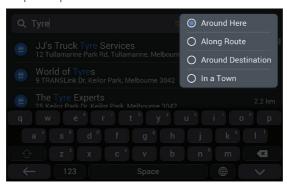


- 4. All search options are only available if there is a current or planned trip.
- 5. By default, the search area is 'Around Here'. This search will show results in the area around the current location and sorted by distance from location. 'Along Route' will search along the current or planned route, 'Around Destination' will search in the area around the destination and 'In a Town' will search within a selected town.
- 6. Select the area to search, then **touch** the button to return to the **Search by Name or Category** screen.
- 7. Touch the Name or address field to display the keyboard.
- 8. Enter the required place. As each character is entered, a filtered list of locations is displayed under the search field.




9. **Touch** the **v** button to hide the keyboard and reveal the list.


- 10. **Scroll** up or down the list to locate the required place.
- 11. **Touch** the required place to save and move to the next field.

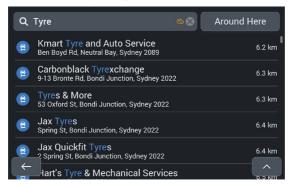


12. **Touch** the **Select** button to save as destination and advance to the map screen.

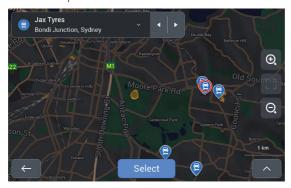

13. To search in a specific town, **touch** the O In a Town button to open the **Select Town/Suburb** screen.

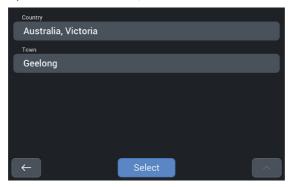

- 14. Enter the required town, suburb. As each character is entered a filtered list of locations is displayed under the search field.
- 15. **Touch** the **v** button to hide the keyboard and reveal the list.
- 16. **Scroll** up or down the list to locate the required place.

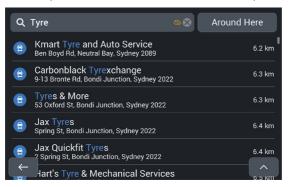


17. **Touch** the required place to save and move to the next field.

3.1.6.3 SELECTING A SAVED LOCATION

From the Map screen, touch the button to open the Main Menu screen, then the New Route button to open the New Route screen.

 Touch the button on the New Route To screen to open the Saved Location screen.

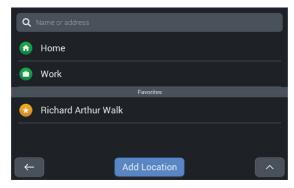

2. By default, the **Saved Location** screen displays two pre-set location buttons:

- **M** Home
- Work

If a user has saved additional locations, they will be displayed under the Home and Work buttons .

- 3. **Scroll** through the list to locate the required saved location.
- 4. **Touch** the required location to open the **Map Location** screen.



5. **Touch** the **Select** button to save as destination and advance to map screen.


3.1.6.4 SELECTING A DESTINATION FROM HISTORY

From the Map screen, touch the button to open the Main Menu screen, then the New Route button to open the New Route screen.

1. Touch the © button on the New Route screen to open the History screen.




2. A list of history items displays with the top three most used routes displayed in the 'Smart History Items' list.

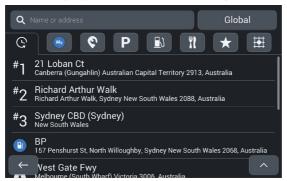

- 3. **Scroll** up or down the list to locate the required place.
- 4. Alternatively **touch** the 'Name or address' field to display the keyboard.
- 5. Enter the required location. As each character is entered a filtered list of locations is displayed under the search field.



- 6. **Touch** the **v** button to hide the keyboard and reveal the list.
- 7. **Touch** the required place to save and move to the next screen.

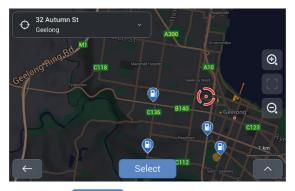

8. **Touch** the **Select** button to save as destination and advance to the **Route Summary** screen.

3.1.6.5 SELECTING COORDINATES

From the Map screen, touch the button to open the Main Menu screen, then the New Route button to open the New Route screen.

1. Touch the button to open the Coordinates screen.



Coordinates can be entered in the following combinations for latitude or longitude:

- Decimal degrees (\$37.8142 E144.9632)
- Degrees and decimal minutes (\$3748.85' E14457.79')
- Degrees, minutes and decimal seconds (\$3748'51.11" E14457'47.52")

Only two coordinates need to be entered in combination, **South** and East or North and West. Touch the N button to change to North, touch the S button to change to South, touch the W button to change to West and touch the B button to change to East.



- 1. **Touch** the **3** button to clear co-ordinates or **touch** the **4** button to backspace and delete selected numbers.
- 2. Start entering the new co-ordinates for South or North.




3. As numbers are entered, the keyboard will automatically sense the numbers entered and change the keyboard to allow degrees, decimal point, minutes or seconds buttons to help with correct input.



- 4. **Touch** the OK button to advance to the next screen.
- 5. Follow steps 1-4 to enter the next coordinates for East or West.



- 6. Touch the Go! button to advance to the next screen.
- 7. The location will be centred on the map, pinned with a 6) icon.

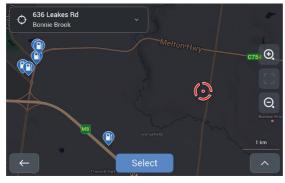

8. **Touch** the **Select** button to save as destination and advance to the **Route Summary** screen.

UTM coordinates can also be entered in **Easting** and **Northing**. To change coordinates to **UTM**, **touch** the button on the **Coordinates** screen.

1. **Touch** the **UTM** Coordinates button on the **Coordinates** screen to advance to the **UTM** Coordinates screen.






UTM Zone

- 2. If required, the **UTM Zone** can be changed by **touching** the button.
- 3. **Touch** the **S** button to clear co-ordinates or **touch** the **S** button to backspace and delete selected numbers.
- 4. Enter the new co-ordinates then **touch** the OK button to advance to the **Map Location** screen.


3.1.7 SELECTING A MULTIPOINT ROUTE

From the Map screen, touch the button to open the Main Menu screen, then the Multipoint Route button to open the Multipoint Route screen.

1. **Touch** the **Destination** button to open the **New Route To** screen to search for a new address or add from places, saved locations, history, saved routes or coordinates.

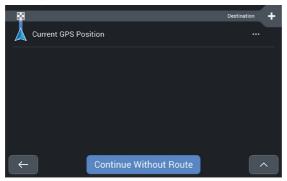

- 2. **Touch** the **Select** button on the **Map Location** screen to save as the destination and return to the **Multi Route** screen.
- 3. Touch the Insert Waypoint button to open the New Route To screen to search for a new address or add from places, saved locations, history, saved routes or co-ordinates.

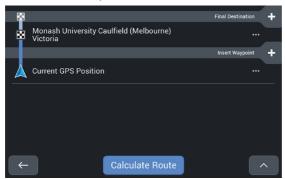

- 4. **Touch** the **Select** button on the **Map Location** screen to save as the destination and return to the **Multi Route** screen.
- 5. Continue adding waypoints as required.

6. **Touch** the **•••** next to any address of a waypoint or destination to re-order the route or current **GPS** position, to save the location, set as the starting point, or show on the map.



- 7. **Touch** the **Calculate Route** button to advance to the **Route Summary** screen.
- 8. The route summary displays the:
 - Start PointWaypointsDestination
- 9. **Touch** the Start button to start the route.

3.2 ROUTE PREFERENCES, ITINERARY AND ALTERNATIVES

Touch at the right bottom corner to go to Route Preferences and Itinerary on the **Route Summary** screen, after a new route has been entered. Alternatives are displayed at top left corner of the screen.


1. From the Main Menu screen, touch the Route Summary button to advance to the Route Summary screen.



2. Touch the button to return to the Map screen.

3.2.1 ALTERNATIVE ROUTES


To view alternative routes to avoid certain roads or congestion, touch the Alternatives button on the Route Summary screen to display a list of different route options.

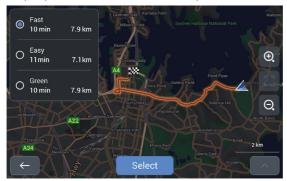

- 1. **Touch** the required alternative route and **()** appears to indicate the selected route.
- 2. **Touch** the **Select** button to return to the **Route Summary** screen.
- 3. Touch the button to return to the Map screen.

3.2.1.1 ROUTE PREFERENCES

 Touch the Route Preferences button to open the Route Preferences screen.

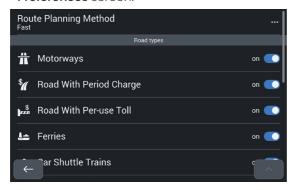

- 2. User can touch and change route preference by adjusting the below options:
 - Route Planning Method (Easy, Fast, Green)
 - Motorways
 - Toll Roads
 - Ferries
 - Car Shuttle Trains
 - Carpool Lanes
 - 4WD Tracks (On Road or Off Road)
 - · Avoid Road Types

3.2.1.2 ITINERARY

- 1. **Touch** the **Itinerary** button to open the **Itinerary** screen and view a step by step list of manoeuvres.
- 2. Scroll up or down the list to view the complete list.
- Touch any manoeuvre or restriction to view its location on the map.



3.3 CHECKING TRAFFIC EVENTS


Offline statistical traffic information (historical speed information or traffic patterns) can be considered in the route calculation based on the time of day and the day of week if suitable data can be found. In addition, real-time traffic information can help avoid current traffic events like temporary road closures or traffic jams caused by an accident. Both functions are subject to data availability.

3.3.1 TRAFFIC SUMMARY WITH NO ACTIVE ROUTE


1. Touch the button to open the Traffic Summary screen.



2. If there is no active route entered, the **Traffic Summary** screen will display all events.

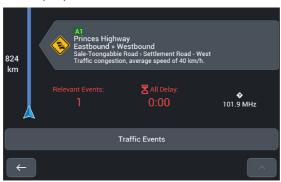

- 3. Touch the Traffic Events button to open the Traffic Events screen.
- 4. Touch the button to return to the Map screen.

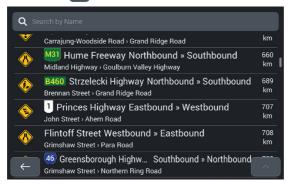


- 5. **Scroll** up or down the list to view the complete list of traffic events.
- 6. Touch the required event to open the Event Details screen.



- 7. **Touch** the \leftarrow button to return to the **Traffic Summary** list screen.
- 8. Touch the button to return to the Traffic Events list screen.


3.3.2 TRAFFIC SUMMARY WITH ACTIVE ROUTE

1. **Touch** the button to open the **Traffic Summary** screen.

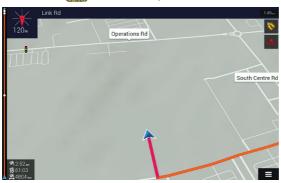


- 2. **Touch** the () or () buttons to view previous or next page.
- 3. Relevant event information is displayed with time delay expected.

4. Touch the Traffic Events button to open the Traffic Events screen.

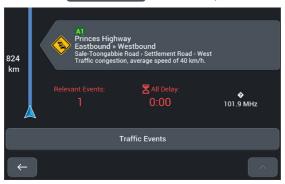

- 5. Touch the button to return to the Map screen.
- 6. **Scroll** up or down the list to view the complete list of traffic events.

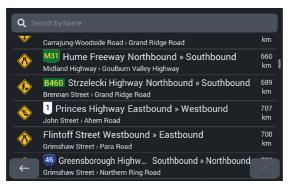


7. **Touch** the required event to open the **Event Details** screen.



- 8. **Touch** the \leftarrow button to return to the **Traffic Summary** screen.
- 9. **Touch** the **1** or **b** buttons to view previous or next page.
- 10. **Touch** the button to return to the **Traffic Events** screen.
- 11. Road segments affected by traffic events are displayed in a different colour (blue) on the map, and small symbols above the road show the nature of the event.

3.3.3 TRAFFIC MAP CURRENT AND HISTORIC

1. Touch the button on the Map screen to open the Traffic Summary screen.

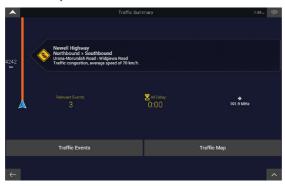

2. Touch the Traffic Map button to open the Current Traffic Map screen.



- 3. The map displays the current vehicle location and real time traffic information. Traffic impact flow is indicated on the map with coloured sections of the route. Heavy traffic is represented by a dark red line. As traffic flow and density reduce, the colour will change to red, orange, yellow and finally green to represent light traffic.
- 4. Touch the Subutton to open the Historical Traffic Map" screen.
- 5. **Touch** the button to return to the **Traffic Summary** screen.



- 6. The map is displayed with road segments coloured by the likely density of the traffic in the given period. The information relevant for the current period is shown when opening the screen. If necessary, browse the map for a better view of certain road segments. Modify the day of week and the time of day to see the desired period.
- 7. Touch the button to return to the Current Traffic Map screen.
- 8. **Touch** the button to return to the **Traffic Summary** screen.

3.4 EDITING A ROUTE

When navigation has started, there are several ways to modify the planned route using the following options:

- Adding an additional destination, (See 3.4.1).
- Saving a location, (See 3.4.2).
- Editing a location, (See 3.4.3).

3.4.1 ADDING AN ADDITIONAL DESTINATION

If a route has already been planned and a new destination is selected as described in the above sections, the route to the previous destination is deleted and a new route is calculated.

To add a new intermediate destination to an active route, perform one of the following actions:

 On the Map screen, zoom in or out on the map to locate the additional destination, then touch the screen to place a cursor in the required position.




- 2. Touch the Add Waypoint button to add the waypoint to.
- 4. **Touch** the Start button to continue navigation.

3.4.2 SAVING A LOCATION

To add a location to 'Saved Locations', perform the following steps:

1. Select the required location using any of the earlier mentioned methods then continue to the **Map Location** screen.

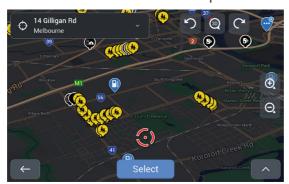

- 2. **Touch** the button to display a list of options.
- 3. **Touch** the Save Location button to open the Save location screen.
- 4. If searching by address, the street name will auto fill the 'Location Name' field.



- 5. **Touch** the **S** button to delete the field text or **touch** the **S** button to backspace and edit the text.
- 6. Once the desired name has been entered, **touch** the button to return to the **Map Location** screen.




- 7. A 🔀 icon indicates the saved location.
- 8. **Touch** the button to calculate the route and start as a new route or touch the **Select** button to return to the **Map** screen.


3.4.3 EDITING A LOCATION

From the Map screen, touch the button to open the Main Menu screen, then the New Route button to open the New Route screen.

1. Touch the 🖈 button to open the Saved Location screen.

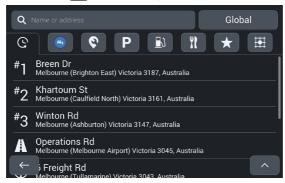


2. Touch the houtton to display the Edit button.

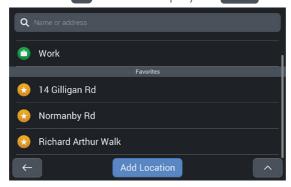

3. Touch the ••• button to display an edit option list.

4. **Touch** the required option to open the **Rename Saved Location** screen or the **Delete Saved Location** screen.

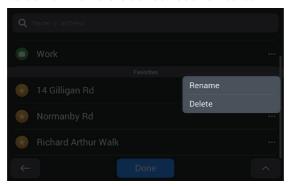

6. Touch the Done button then the button to return to the Map screen.

3.4.4 GPS INFORMATION

- 1. From the Map screen, touch the button to open the Main Menu screen, then the Settings button to open the Settings Menu screen.
- 2. Touch the GPS Information button to open the GPS Information screen.



3. This screen displays satellite reception information.

4.0 UPDATES


Map updates are achieved **OTA** (Over-the-Air) and require a Wi-Fi connection. Please refer to the Setup section on page 48 of the **Infotainment User Manual** for Wi-Fi connection instructions.

From the Map screen, touch the button to open the Main Menu screen, then the Map Updates button to open the Update screen.

Updates are displayed as a list on the **Update** screen as they become available.



- 1. **Touch** the button to delete an item or enter a promo code.
- 2. **Touch** the \leftarrow button to return to the Map screen.
- 3. **Touch** the Free button to download the update. Then touch the Install button to install the update.

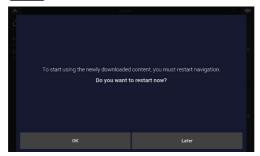


4. **Touch** the **OK** button to restart the navigation.

4.1 SETTINGS

From the Map screen, touch the button to open the Main Menu screen, then the Settings button to open the Settings screen and configure the navigation settings and modify the behaviour of the infotainment system.

4.1.1 ROUTE PREFERENCES


Touch the Route Preferences button to open the Route Preferences screen.

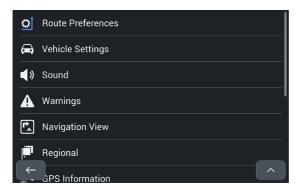

4.1.1.1 ROUTE PLANNING METHOD/NAVIGATION MODE


- 1. **Touch** Route Planning Method from: to change the route planning method
 - Fast
 - Easy
 - Green

This feature changes the way routes are calculated.

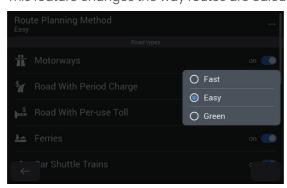

4.1.1.2 ROAD TYPES


1. Scroll up or down the list to view the complete list of settings.

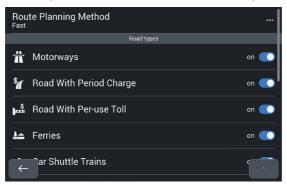

- 2. **Touch** the required item to turn the item On **O** or Off **O**.
- 3. **Touch** the **—** button to return to the **Settings** screen.

4.1.2 SOUND

1. Touch the (1) Sound button to open the Sound screen.

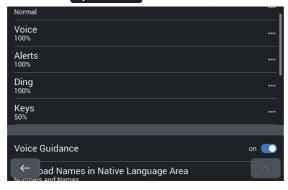

- 2. **Touch** the **w** button to adjust the volume level.
- 3. Scroll up or down the list to view the complete list of settings.
- 4. **Touch** the or buttons to toggle functions on and off.




5. Touch the — button to return to the Settings screen.

4.1.3 WARNINGS


1. Touch the Marnings button to open the Warnings screen.



2. Touch the Speeding Tolerance button to open the Speed Limit screen.

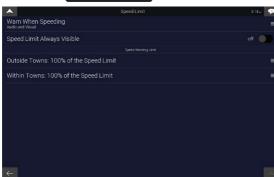

- 3. Select the required field to adjust the parameter.
- 4. Touch the button to return to the Warnings screen.
- 5. Under Alert Types section alert point warnings can be adjusted.

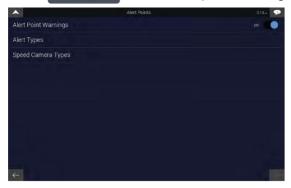

- 6. Turn alert point warnings On and O Off.
- 7. Select the required field to adjust the parameter.
- 8. Touch the button to return to the Warnings screen.

4.1.4 NAVIGATION VIEW

1. Touch the Navigation View button to open the Navigation View screen.



- 2. **Touch** the Colour Mode Speeding Tolerance button to choose between Auto, Day and Night mode.
- Day and Night Map colours can also further be adjusted inside 'Day Map Colours' and 'Night Map Colours' options.


4. Scroll down further to On/Off other map items such as:

- Landmarks
- Buildings
- Enhance 3D
- Route Progress Bar
- Offer Motorway Services
- Automatic Overview
- Signposts

Junction View

Tunnel View

- Junction View
- Tunnel View

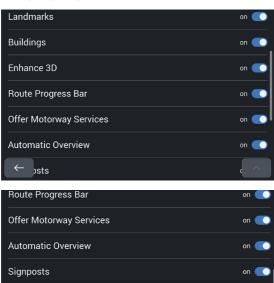


on C

on 🥥

4.1.5 REGIONAL

1. Touch the Regional button to open the "Regional" screen.

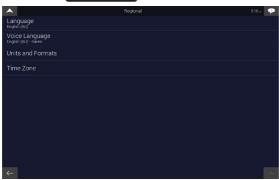

2. **Touch** the required field to change the language, voice, units and formats or time preferences.

4.1.6 START CONFIGURATION WIZARD

1. Touch * Start Configuration Wizard to step through the setup screen to change language, default units, route preferences and speed limit.



5.0 ABOUT

From the Map screen, touch the button to open the Main Menu screen, then the Settings button followed by About to open the About screen.

- 1. **Scroll** up or down the list to view the complete list of settings.
- 2. **Touch** the required field to view specific information.

6.0 TROUBLESHOOTING

This section offers possible solutions to issues that may occur during the operation of this navigation system.

6.1 GPS SIGNAL CANNOT BE RECEIVED

	T. T
ISSUE:	The current location is not available, because the GPS signal cannot be received.
CAUSE 1:	GPS signal is weak or may not be available between tall buildings, in garages or tunnels as the signal weakens or distorts as it travels through solid material.
SOLUTION 1:	Go to a place where there is a clear sight of the sky or at least a bigger part of the sky is visible.
CAUSE 2:	It may take several minutes to receive GPS signals when first using this navigation system, or when the last known position is farther away from the current position.
SOLUTION 2:	Wait a few minutes for the GPS signal.

6.2 ADDRESS CANNOT BE FOUND

ISSUE:	This multimedia unit cannot find the address entered.
CAUSE 1:	The digital map data may not include every single address.
SOLUTION 1:	If the street number is not known or this multimedia unit cannot find it, select only the street name. This way, this navigation system will navigate to the midpoint of the street, where the exact address can be found more easily.
SOLUTION 2:	Search for another address that is close to the destination.
SOLUTION 3:	Search for the co-ordinates or a nearby place of interest.

6.3 THE CALCULATED ROUTE IS NOT OPTIMAL

ISSUE:	The planned route is too long or includes several minor roads.
CAUSE 1:	The route planning method is not set to the optimal parameter.
SOLUTION 1:	Select the preferred route planning method by performing the following steps: From the Main Menu, navigate to the Settings button to open the Settings screen From the Settings screen, open the Route Preferences screen. Change the Route Planning Method between Fast, Easy, or Green

6.4 THE SPEED LIMIT WARNING IS NOT ACCURATE

ISSUE:	The speed limit warning is signalling even when the actual speed limit is kept.
CAUSE 1:	The speed limit in the digital map data might differ from the actual speed limit of the current location.
SOLUTION 1:	Disable the speed warning by performing the following steps: From the Main Menu, navigate to the Settings button to open the Settings screen From the Settings screen, open the Warnings screen. From the "Speed Limit" screen disable the Warn When Speeding option.

6.5 KEYBOARD BUTTONS ARE GREYED OUT

ISSUE:	Some keyboard buttons are greyed out and cannot be used.
CAUSE 1:	This navigation system has a smart keyboard for address search, which means that only certain buttons are active to enable to type in the address available on the map.
SOLUTION 1:	Check that the name has been entered correctly. If the name is correct, then the address is not available in the digital map data.

6.6 MAP IS HIDDEN BEHIND JUNCTION IMAGE

ISSUE:	The map is not visible because it is hidden behind an image of a junction.
CAUSE 1:	When approaching a an expressway exit or a complex intersection and the needed information exists, the map is replaced with a 3D view of the junction. The lanes needed are displayed with arrows.
SOLUTION 1:	To hide the currently displayed junction and return to the navigation view, touch the picture. To turn off this feature, perform the following steps: • From the "Main Menu", navigate to the "Settings" button to open the "Settings" screen • From the "Settings" screen, open the "Navigation View" screen. • From the "Navigation View" screen turn off the "Junction View" option.

COPYRIGHT

As part of ongoing product improvements, the contents of this manual are subject to change without prior notice.

This manual may not, in whole or in part, be reproduced or transmitted in any form either electronically or mechanically, including photocopying and recording, without the express written consent of Directed Technologies.

© 2024 - Directed Technologies. All rights reserved.

MAP DATA: © 1987 - 2024 HERE. All rights reserved. See http://corporate.navteq.com/supplier_terms.html.

All rights reserved.

NOTES			

NOTES			

Directed Technologies
5-119 Link Road, Melbourn

115-119 Link Road, Melbourne VIC 3045, Australia

© COPYRIGHT DIRECTED ELECTRONICS OF PTY LTD